

 
 
 
Copy VHS to DVD (Multiple VHS to One DVD)

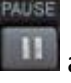
1. Turn on the monitor (S1) and converter (M1), then wait 20 seconds.

2. Prepare the 1st VHS tape.


a. Insert the 1st VHS tape.


b. (Optional; this step is to ensure that the VHS tape is functional)

Press , then wait until the tape reach its end point; Press , then wait until the tape reach its start point; Press .


c. Press  at the point you wish to start recording.

3. Prepare the DVD disc.


a. Press , and make sure 'DVD' light on the converter panel is on.

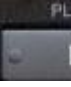
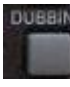
b. Press  to eject the DVD slot.

c. Insert a blank DVD disc (the DVD-R format is preferred).

d. Press  again to close the DVD slot, then wait until the 'Loading' is complete.

4. Copy the 1st VHS tape to the DVD disc.


a. Press , and make sure 'VCR' light on the converter panel is on.


b. Press , then immediately press .

c. Now, the **VCR → DVD Dubbing** should appear on the monitor (S1). This means the converter is recording the video from VHS to DVD.

d. Press  when you decide to stop the recording, then wait until the 'Writing to Disc' is complete.

5. Remove the 1st VHS tape

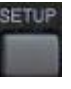





a. Press , and make sure 'VCR' light on the converter panel is on.


b. Press  to eject the VHS slot, then remove the VHS tape.








c. Press , and make sure 'DVD' light on the converter panel is on.




6. (Optional; this step is to customize the default title which is 'VCR LP'.)

Customize the first video title of DVD.

a. Press  -> select 'Title list' -> press  -> press  -> select 'Edit' -> press  -> select 'Edit Title Name' -> press  -> Press  to delete the default title.

b. (For example, the new title is 'Test1') For typing the 'Test1', press  once to print 'T' -> switch to the lowercase

input by pressing  -> press  -> press  to move the cursor -> press  twice to print 'e' -> press  4 times to print 's' -> press  once to print 't' -> switch to the numeric input by pressing  -> press

 

 
 -> press  to move the cursor -> press  once to print '1'.


c. Press  -> select 'Yes' -> press  -> press  ->press  -> wait until the 'Writing to Disc' is complete.

7. Prepare the 2nd VHS tape.

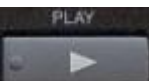

a. Insert the 2nd VHS tape.

b. (Optional; this step is to ensure that the VHS tape is functional)

Press , then wait until the tape reach its end point; Press , then wait until the tape reach its start point; Press .

c. Press  at the point you wish to start recording.


8. Copy the 2nd VHS tape to the DVD disc.


a. Press , then immediately press .


b. Now, the **VCR → DVD Dubbing** should appear on the monitor (S1). This means the converter is recording the video from VHS to DVD.

c. Press  when you decide to stop the recording, then wait until the 'Writing to Disc' is complete.

9. Remove the 2nd VHS tape

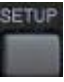






a. Press , and make sure 'VCR' light on the converter panel is on.


b. Press  to eject the VHS slot, then remove the VHS tape.








c. Press , and make sure 'DVD' light on the converter panel is on.




10. (Optional; this step is to customize the default title which may be 'VCR LP'.)

Edit the second video title of DVD.

a. Press  -> select 'Title list' -> press  -> select the second video by pressing  -> press  -> select 'Edit' -> press  -> select 'Edit Title Name' -> press  -> Press  to delete the default title.

b. (For example, the new title is 'Test2') For typing the 'Test2', press  once to print 'T' -> switch to the lowercase

input by pressing  -> press  -> press  to move the cursor -> press  twice to print 'e' -> press  4 times to print 's' -> press  once to print 't' -> switch to the numeric input by pressing  -> press

 -> press  to move the cursor -> press  once to print '2'.

c. Press  -> select 'Yes' -> press  -> press  -> press  -> wait until the 'Writing to Disc' is complete.

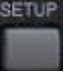



11. (Optional)


Copy another VHS tape to the DVD disc.


a. Repeat Step 7, 8, 9 and 10 to copy the 3rd (or the 4th) VHS tape.

Note: the DVD disc is capable to record 4 hours video (LP mode), and a regular VHS tape always contains 1 hour long video. So that 1 DVD disc can accommodate 4 regular VHS tapes.

12. Finalize the DVD.

a. Press  -> select 'DVD Menu' -> press  -> select 'Finalize' -> press  -> select 'Yes' -> press  -> wait until the 'Finalizing' process is complete (**10 minutes at least**).

b. Press  to eject the DVD slot, then remove the DVD disc.

c. Press  again to close the DVD slot.

13. Turn off the converter (M1) and monitor (S1).